



ANVÄNDARMANUAL
Sedelräknare PN1000 (ProNote 100)

USERMANUAL (English page 2)
Bank Note Counter PN1000 (ProNote 100)



Innehållsförteckning:	Sida:
1) Kontroll panel	1
2) Att komma igång	2
3) Teknisk data	2

1. Kontroll panel

BATCH / Batching

Genom att trycka på knappen BATCH kan du byta mellan de förprogrammerade inställningarna 100-50-20-10-OFF

MODE / Counting mode selection

Två olika inställningar finns: **Value Balancing Mode**: Lägg på sedlarna och maskinen räknar antal sedlar och värdet. **Piece Mode**: Räknar antal, ingen äkthetsverifiering. Kontrollerar sedlarna på höjden och stannar om annan valör än den man räknar gömmer sig emellan.

ADD / Addition counting

Alla sedelbuntar blir summerade istället för att varje sedelbunt räknas för sig.

CURRENCY / Currency selection

Används för att byta valuta.
För byte eller tillägg av valuta kontakta ProfSAFE.



CLEAR

För att nollställa räkneverket.

START

För att rensa felmeddelande och för att återställa räkneverket efter ett felmeddelande.

SPEED / Counting speed

Det finns 3 olika hastighetsnivåer. "Middle" är den bästa hastigheten med tanke på hastighet kontra ljudnivån.

FUNCTION / Setting detection

Här kan du välja vilken känslighetsinställning du önskar. Gör inställningarna under +1/+10 knappen.

+1 / +10:

För att ändra hur många sedlar som ska räknas i taget. Tryck knappen för att öka med ental, håll inne knappen för att öka med tiotal.

DETAIL / Displaying counted notes

Ger detaljerad information om senaste uppräknigen. Denna funktion är endast möjlig när maskinen står i Value Balancing Mode.

Identified with: ProNote 100

2. Att komma igång



1. Starta maskinen

Använd on/off knappen på baksidan.



5. Efter räkningen

Uppräkningen är klar när det inte längre finns sedlar kvar i inmatningsfacket. I displayen visas antalet räknade sedlar och totalt värde.




2. Justera sedelhållarna

Flytta försiktigt höger och vänster hållare mot varandra för att justera efter längden på sedeln. Placera alltid sedlarna uppifrån och centrerat i inmatningsfacket.



6. Skötselråd

Sedelräkning orsakar damm i maskinen. Vid jämna mellanrum ska damm och smuts avlägsnas med hjälp av med följande pensel.

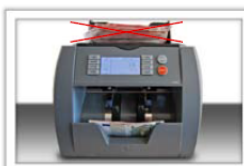

3. Börja räkna

Maskinen startar automatiskt när sedlar placeras i inmatningsfacket.



4. Felmeddelande

Om felmeddelande visas på skärmen, följ instruktionen.

3. Teknisk data

Kapacitet & Hastighet

Kapacitet inmatningsfack: 300 sedlar
Kapacitet utmatningsfack: 200 sedlar
Hastighet: 800 / 1200 / 1500 sedlar per minut

Teknisk data

Dimensioner H x B x D, mm: 248 x 243 x 287
Vikt: 6,5 kg.
Strömförbrukning: 60W
Strömförsörjning: AC 110-240V / 50-60 Hz
Temperatur omgivning: 40° C
Luftfuktighet: 4 90 %



Content:

- | | |
|----|-------------------|
| 1) | Panel |
| 2) | To get started |
| 3) | Facts and figures |

Sida:

- | |
|---|
| 3 |
| 3 |
| 4 |

1. Panel

BATCH / Batching

By pushing the BATCH Key you can swap between the pre-programmed batch stop setting 100- 50- 20- 10- OFF

ADD / Addition counting

All banknote bundles will be counted together instead of restarting the counting with every new bundle

SPEED/ Counting speed

3 speed levels can be selected. Middle speed offers the best profile in terms of counting speed and noise level.

+1 / +10:

The pre-programmed batch steps can be individually adjusted within the range of 1 to 200 notes or OFF.

(Pushing the key changes the value by one, keeping it pushed changes the value by 10)

MODE / Counting mode selection

2 modes can be selected:

VALUE BALANCING MODE, PIECE MODE

(save user settings - on page 4)

CURRENCY / Currency selection

EUR, USD GBP and three further self-definable currencies can be selected.

CLEAR

To clear the counting result.

(reset device to factory settings - on page 4)

START

To clear error messages, and to restart counting after an error message.

FUNCTION / Setting detection

By pushing this key you can choose from the available detections (see Facts & Figures) and do the settings using +1/+10 key.

DETAIL / Displaying counted notes

After the counting process in VALUE BALANCING mode, a detailed view can be displayed, showing quantity of each denomination and the total value.

Identified with ProNote 120

2. To get started



1. Switch on

Switch on the banknote counter with the ON/OFF switch located at the rear side of the machine. The counter is ready after a short self-check.



2. Adjust note guides

Move the right and left note guide gently towards each other to adjust them at the length of the denomination to be counted. In MIX MODE, adjust them to the longest denomination. **Place the banknotes always from above and centred to the hopper.**



3. Start counting

The **counting starts automatically** after placing the banknotes on the hopper. Place the notes calmly on the hopper. **Please take care that the notes don't move sideways on the hopper and please check the note bundle for foreign objects like coins or clamps which could damage the sensors.**



4. Confirming error messages

In case of an error message, please follow the instructions on the display.



5. Finish the counting process

The counting is finished as soon as no more banknotes are on the hopper. Machine stops, if the adjusted batch stop is reached, or if the stacker is full. The display shows the number of counted notes and the total value.



Clean & Care

The abrasion of the counted note papers causes dust in the machine. From time to time, or in case of an error message, dust and dirt should be carefully removed with a soft brush and cleaning cloth as enclosed in the carton.

3. Facts and figures

Kapacity and speed

Capacity hopper: 300 notes
Capacity stacker: 200 notes
Counting speed: 800 / 1200 / 1500 notes per minute

Technical data

Dimensions H x W x D, mm: 248 x 243 x 287
Weight: 6,5 kg.
Power consumption: 60W
Power supply: AC 110-240V / 50-60 Hz
Ambient temperature: 40° C
Humidity: 90 %